




1

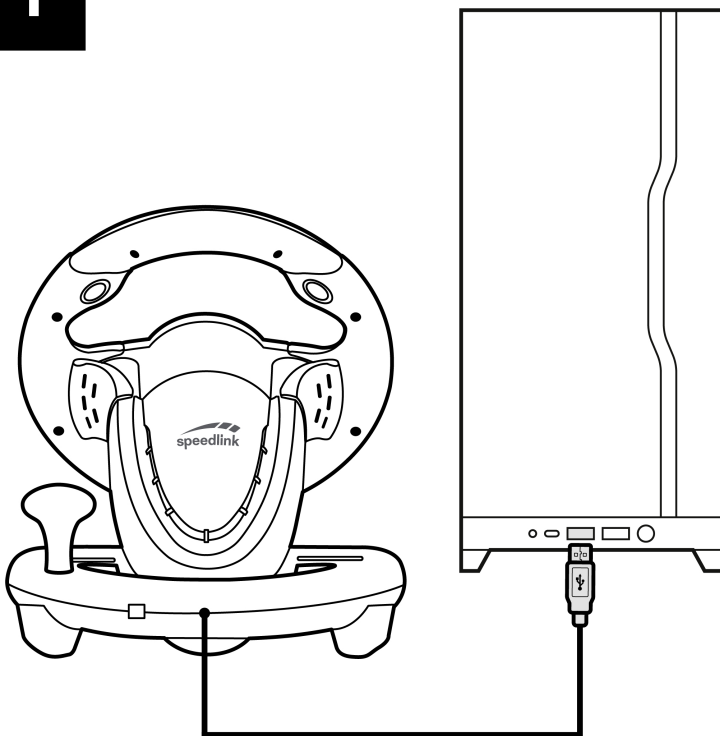

2

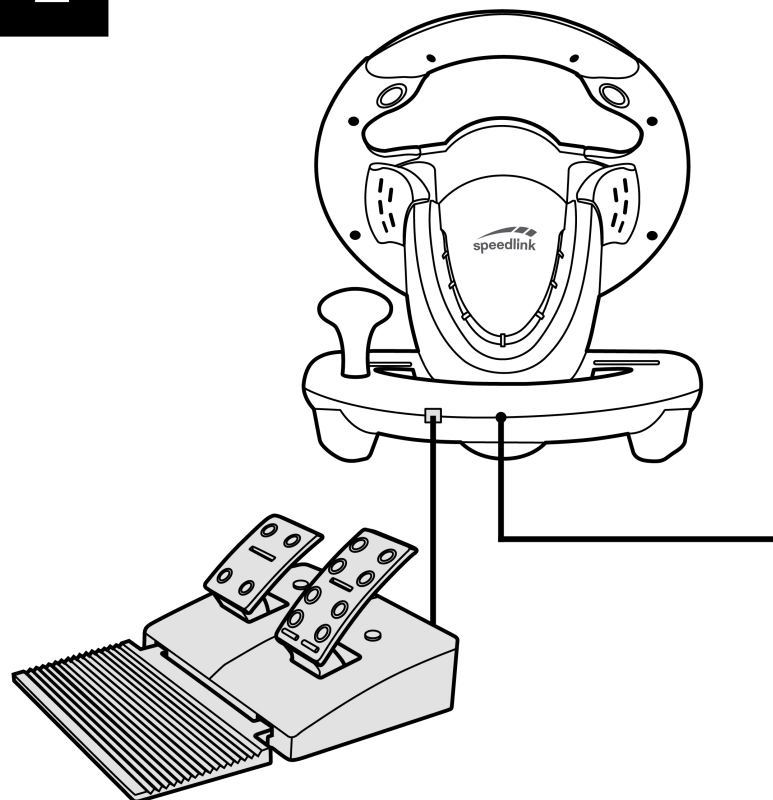


3

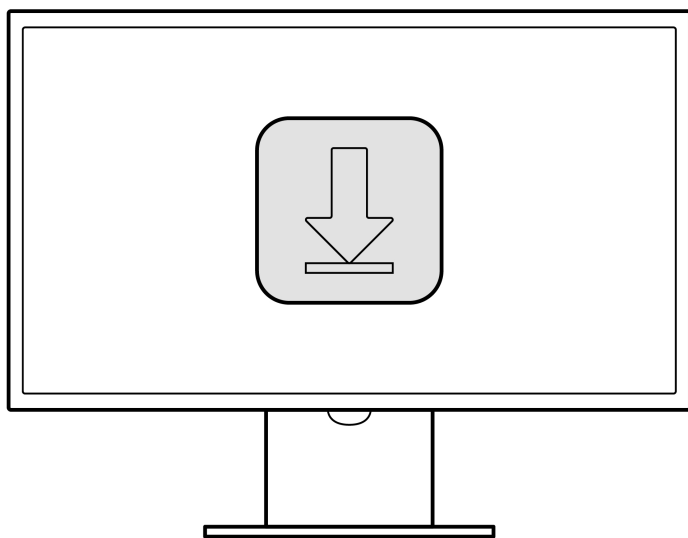


Treiber runterladen unter www.speedlink.com
 Download the driver at www.speedlink.com
 Téléchargez le pilote sur www.speedlink.com

4

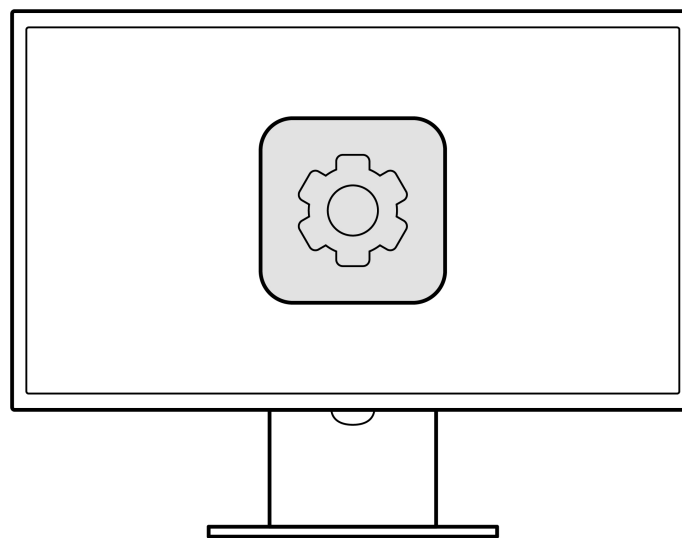


Standardmodus: DirectInput*
 Default mode: DirectInput*
 Mode par défaut : DirectInput*

DirectInput*

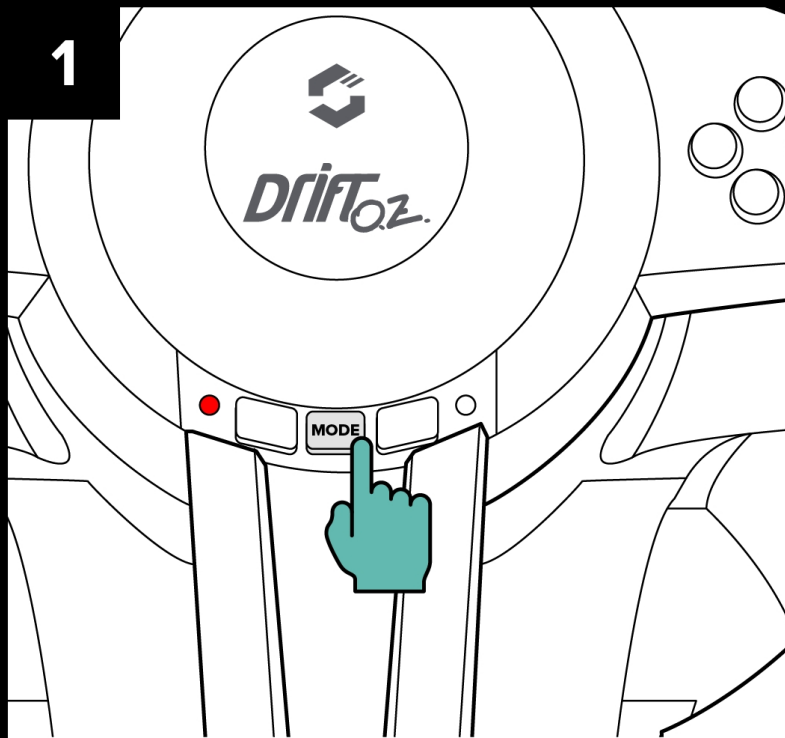


Wechsel digitaler/analoger DirectInput* Modus
Switch digital/analog DirectInput* mode
Changement du mode numérique/analogique DirectInput*

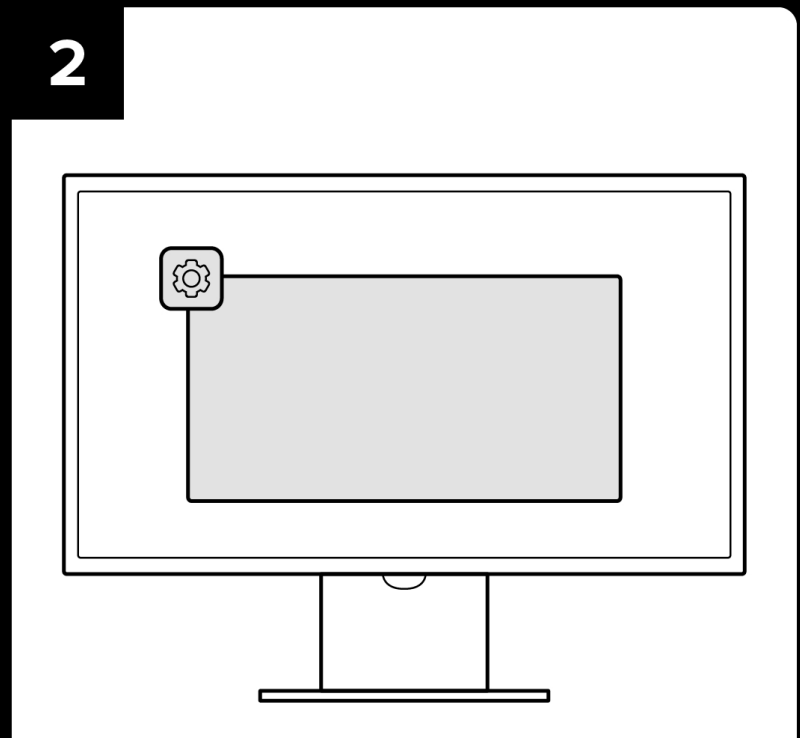


Detaillierte Einstellungen im Treibermenü vornehmen
Make precise configurations in the driver menu
Effectuer des configurations précises dans le menu du pilote

XInput

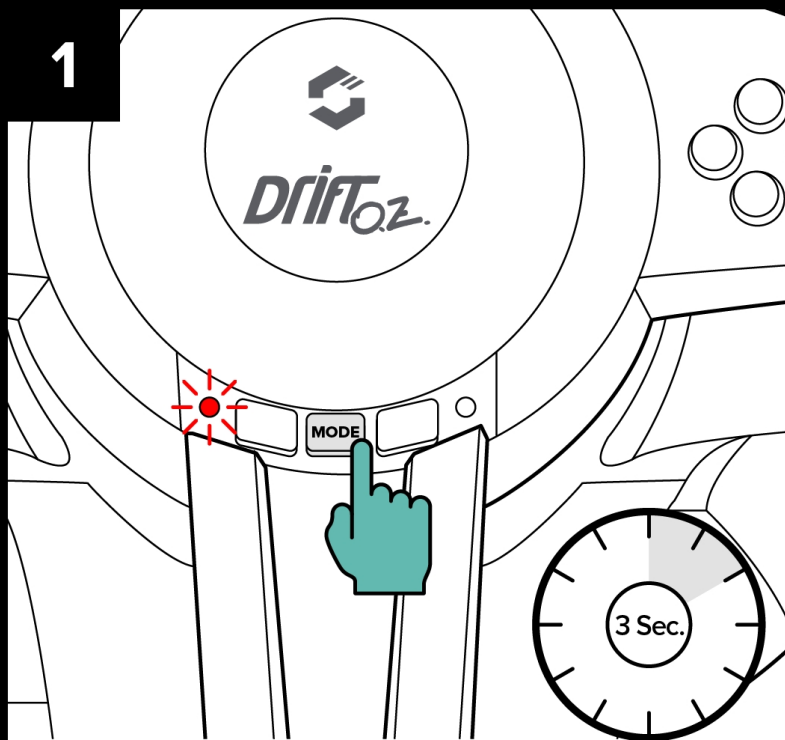

Wechsel XInput/DirectInput* Modus
Switch XInput/DirectInput* mode
Changement du mode XInput/DirectInput*

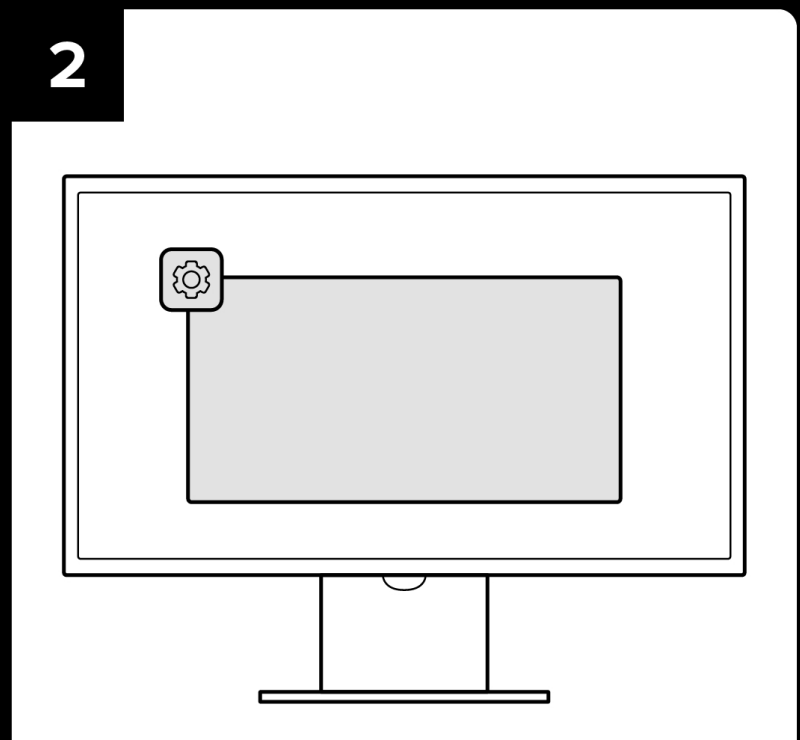

Lenkrad-/Tastenfunktion im Treibermenü prüfen
Check wheel/button function in the driver menu
Vérifier la fonction du volant/des boutons dans le menu du pilote